


# Heat PumPro Panel Wood Burner as Primary Heat

## Notes

1. Wire the Aqua Stat from R to E & H at Zone 1.
  - This will energize the E/H input any time there is available heat from the wood burner
2. When the Aqua-stat closes (WdBmr Hot) it will;
  - Energize the "E" (Emerg Ht) terminal at Zone 1, and will lock out the heat pump.
  - Energize the "H" terminal at Zone 1, this will energize the H output and energize the Relay to lock out the Furnace.
3. Zone 1 stat must be a Htg/Clg type (not a Heat Pump stat)
4. Zone 1 should be a zone that will most likely be calling for heat when the WB loses its heating ability.
5. Recommended Set-Up Wizard settings
  - 1- Zone1 stat - "Htg/Clg"
  - 2- Back-Up controls Fan - "True"
  - 3- Type of Back-Up- "Electric"
  - 4- Use BP for Elect - "False"

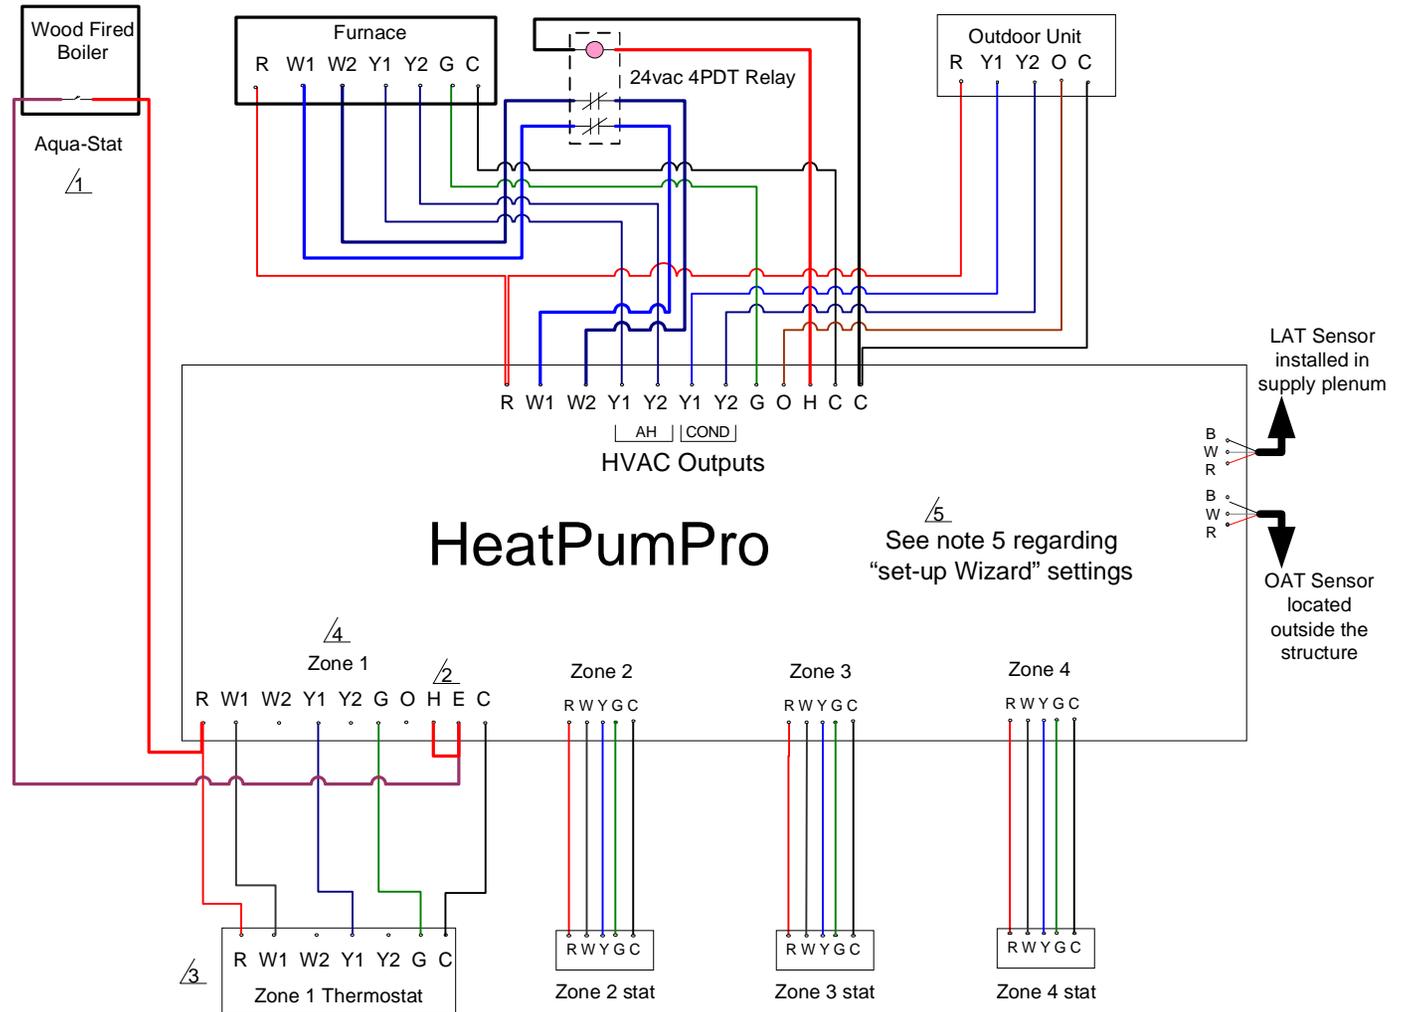

Description: Heat Pump/FF Furnace w/Wood burner

Drawing Number:

Drawn By: J Ramunni Date Drawn: 09/27/11 Revision Date: 07/27/12

**Arzel Zoning Technology, Inc.**  
 4801 Commerce Parkway  
 Cleveland, OH 4128  
 Ph: 800-611-8312  
 www.arzelzoning.com

**ARZEL**  
 Solution-Based Comfort®