


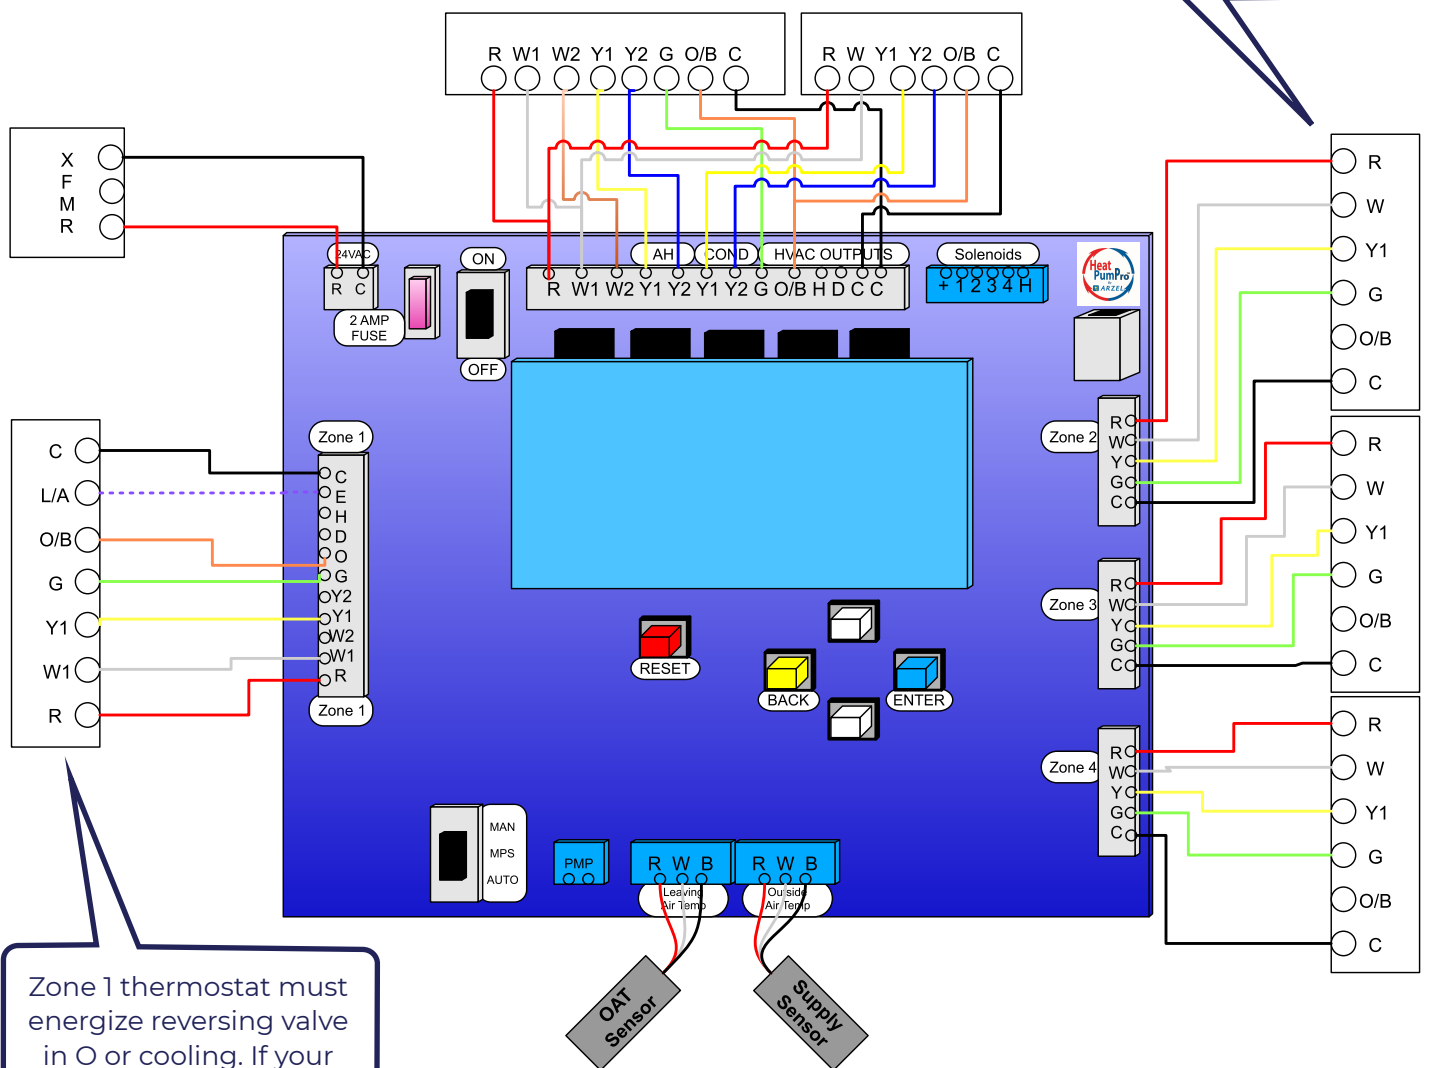

HeatPumPro Optional Heat Pump Thermostat Wiring

Arzel Technical Support
1-800-611-8312
techsupport@arzelzoning.com

The thermostats for zones 2, 3, and 4 must be set for Single Stage Conventional.



Zone 1 thermostat must energize reversing valve in O or cooling. If your heat pump requires reversing valve in heating, set "Rev. Valve Energized" setting in the HeatPumPro Setup Wizard to "Heating."