


Heat/Cool T-Stat at Zone 1

All other thermostats are Basic Single-Stage Heat/Cool Type


In the Set-Up Wizard "Zone 1 Stat Type" is set to "Heat Cool"

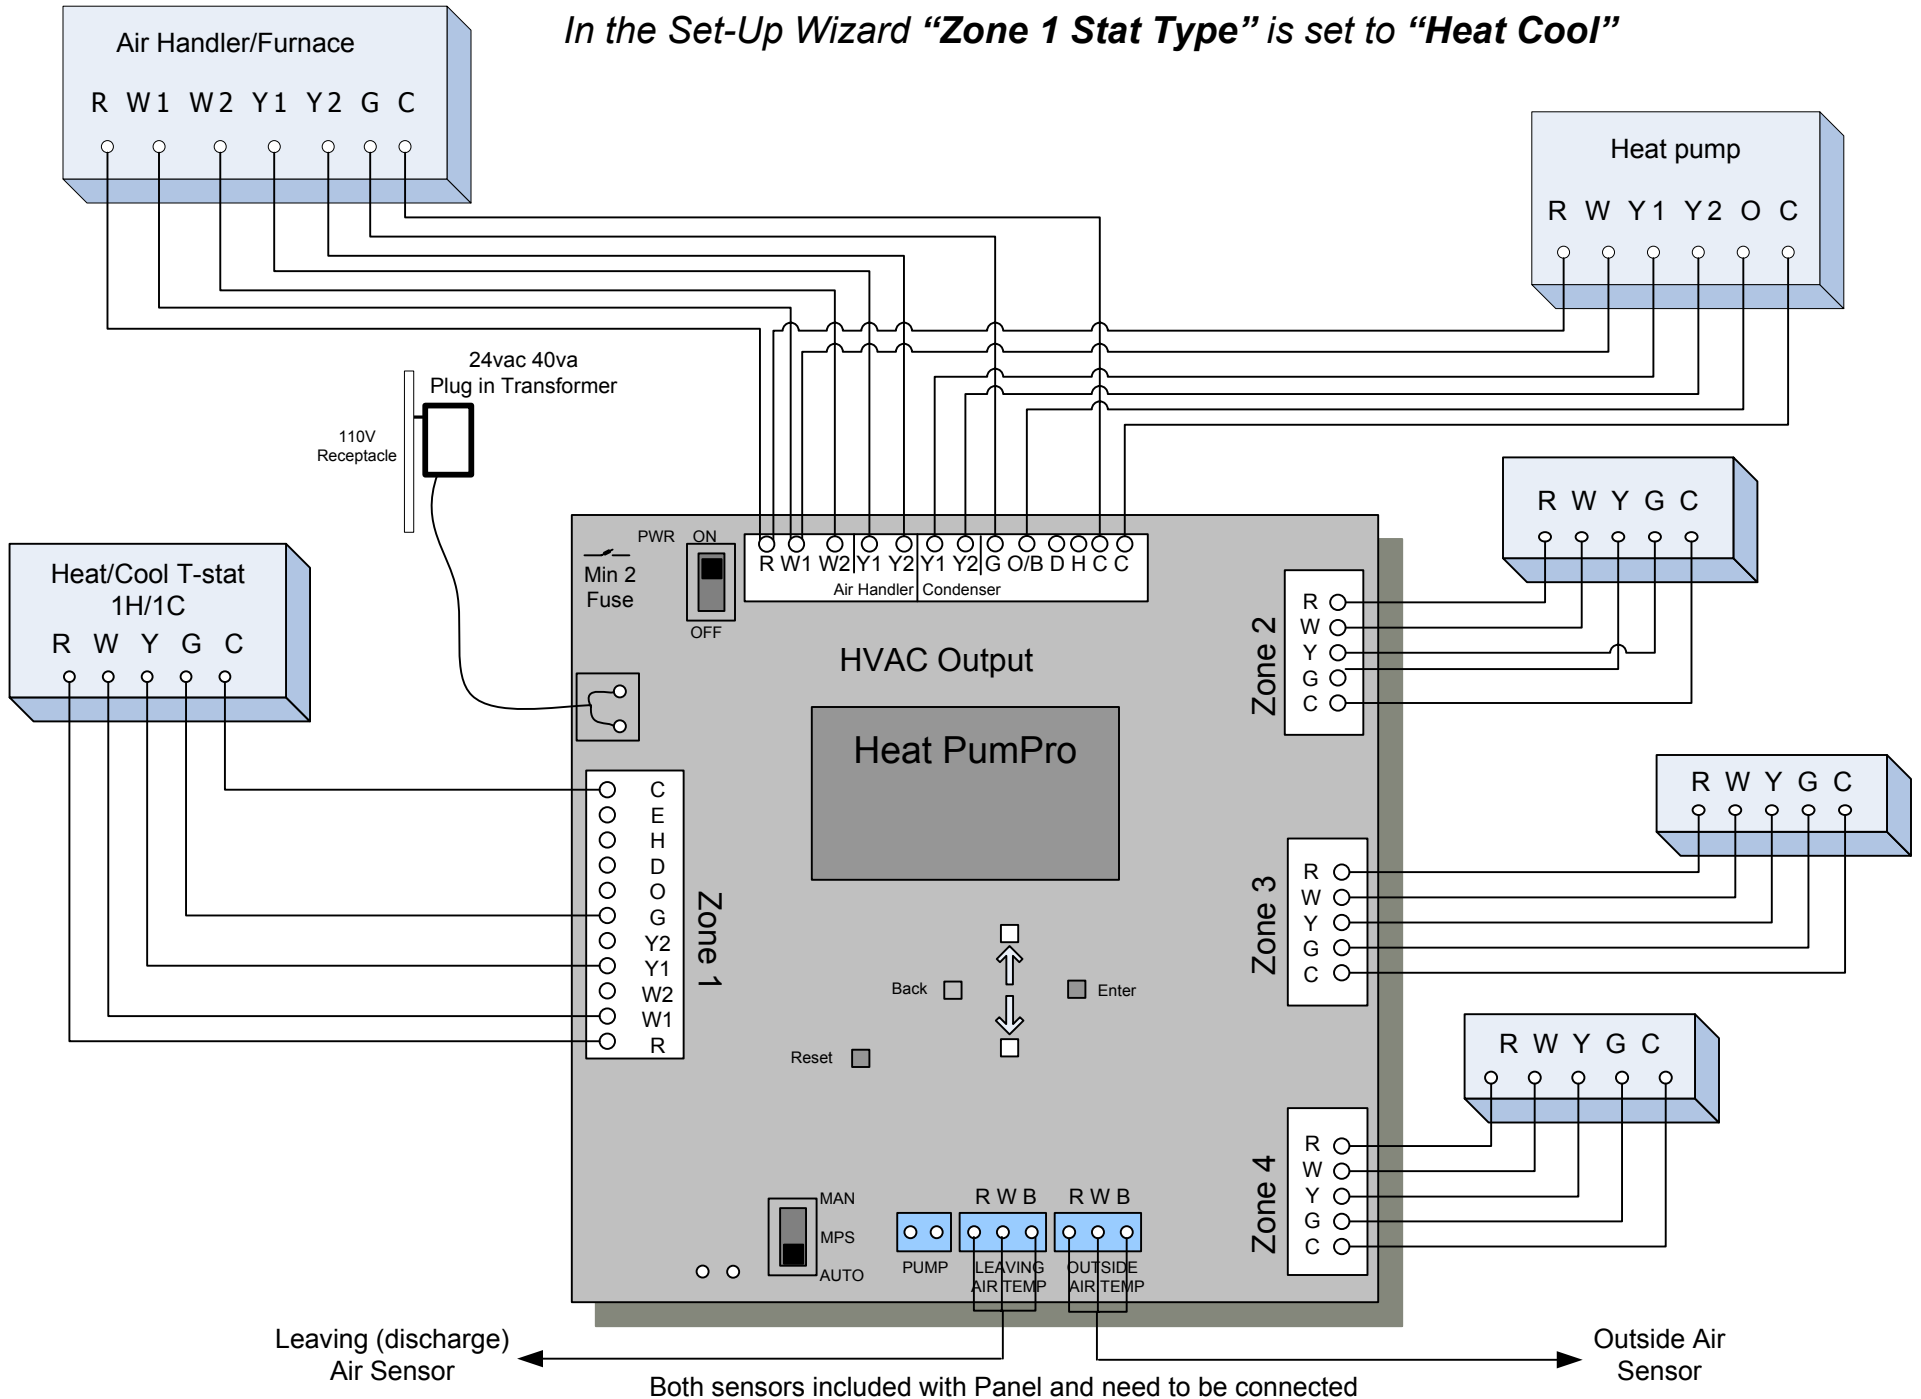

Heat Pump T-Stat at Zone 1

All other thermostats are Basic Single-Stage Heat/Cool Type

In the Set-Up Wizard **“Zone 1 Stat Type”** is set to **“Heat Pump”**

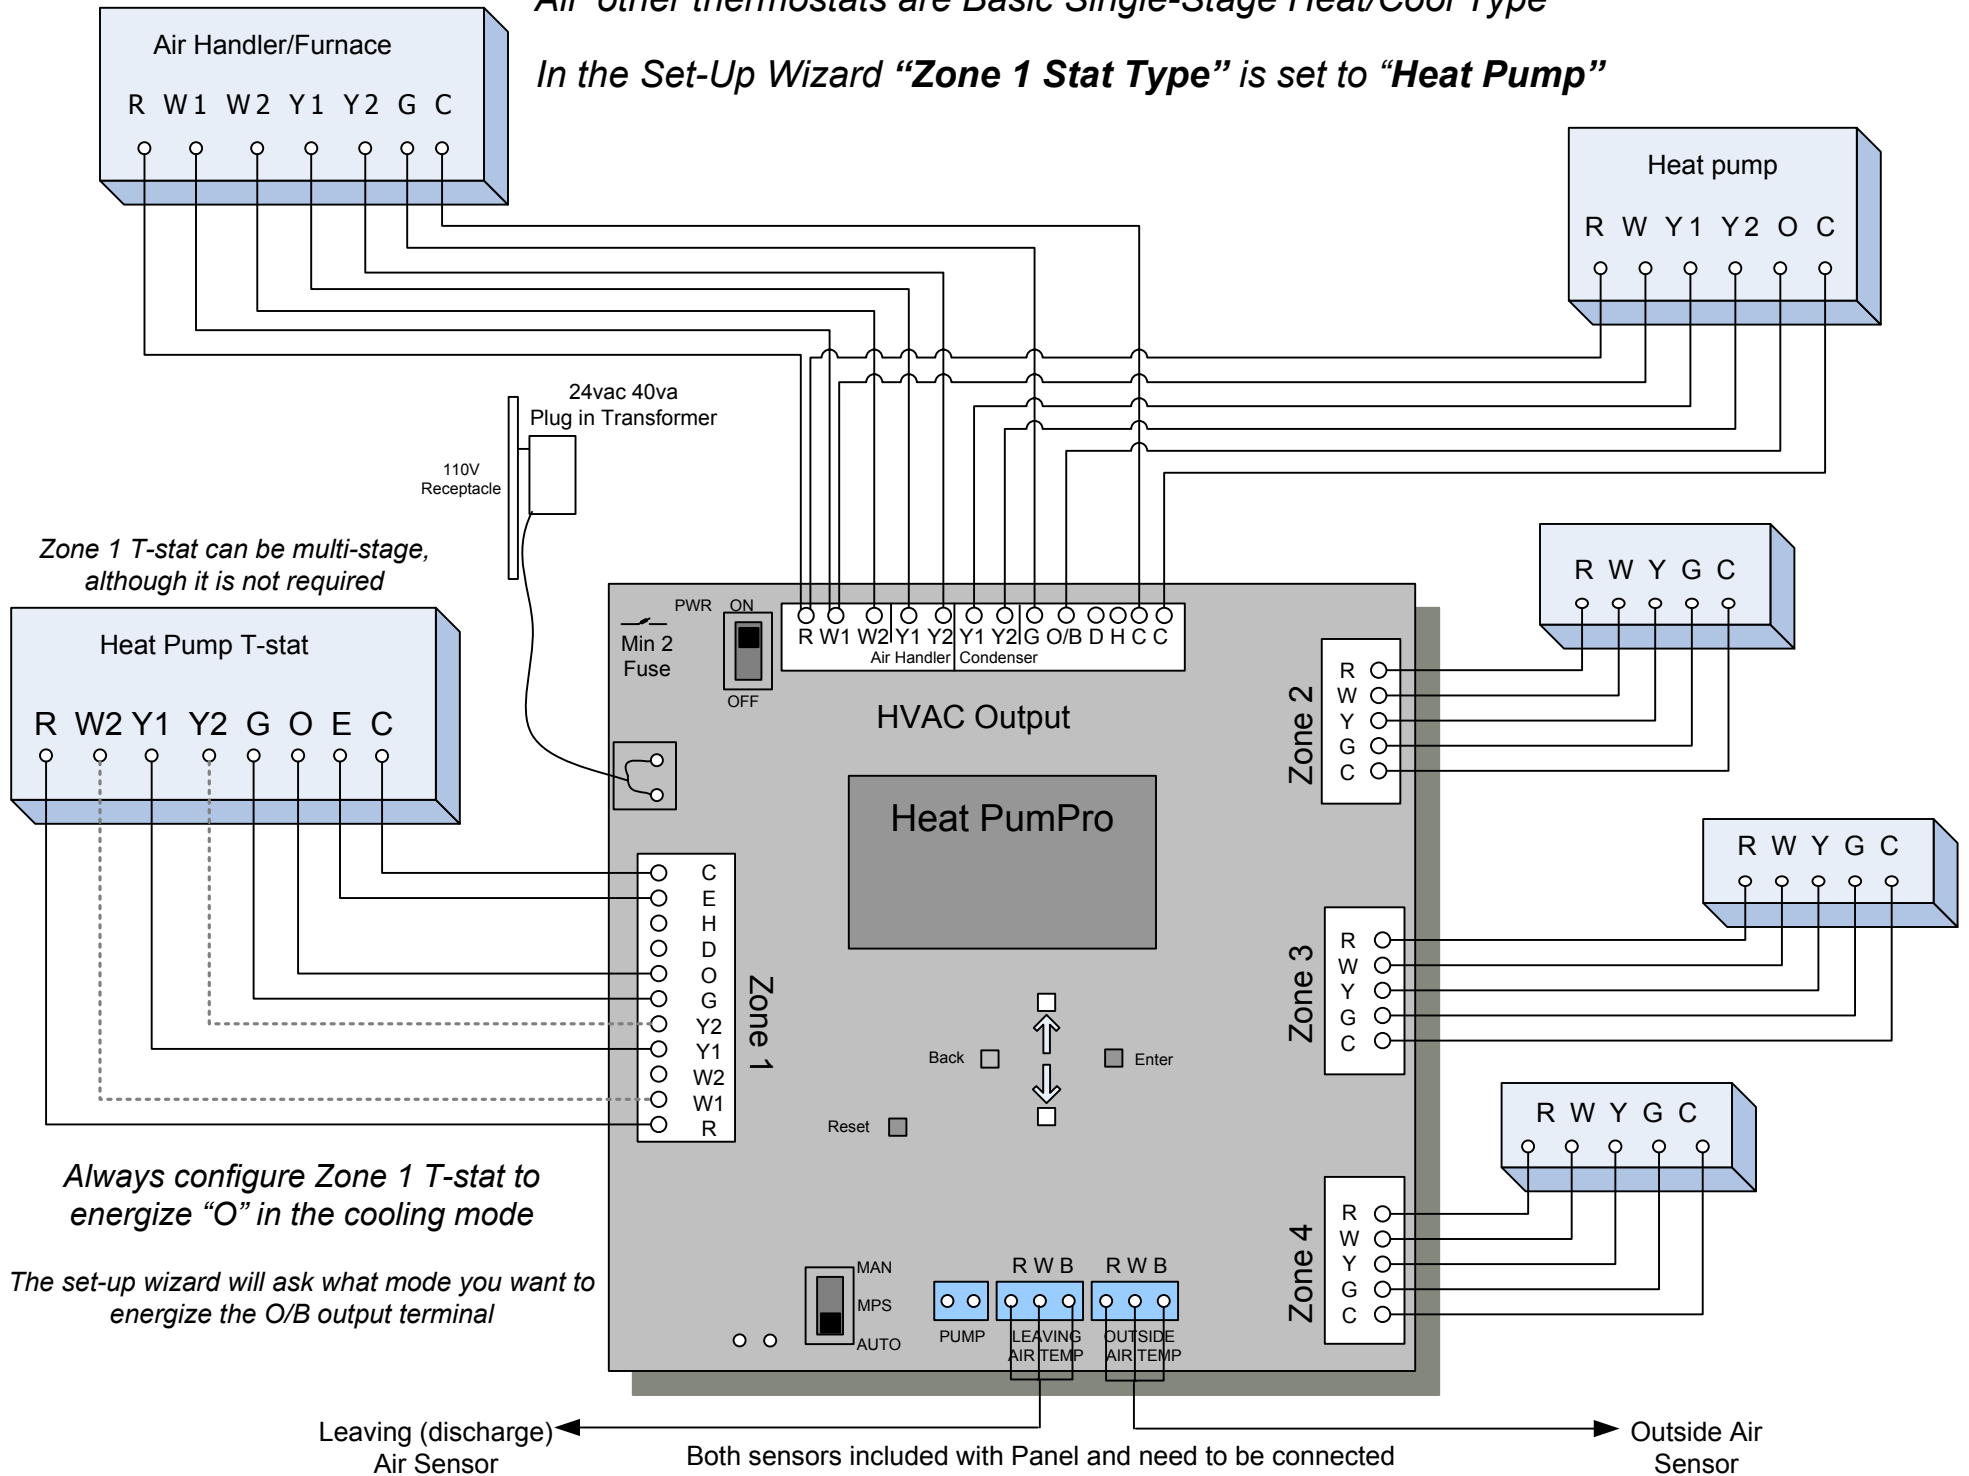

Zone 1 T-stat can be multi-stage, although it is not required

Always configure Zone 1 T-stat to energize “O” in the cooling mode

The set-up wizard will ask what mode you want to energize the O/B output terminal