

Sensor CHEAT SHEET

Use this chart to find the right replacement sensor for your panel. Arzel panels come with the sensors in the box, so you do not need to purchase them separately for installation.

Panel	Sensor Type	Part Number
AirBoss	Leaving air temperature (LAT)	SEN-UPS12
CoolMizer	Temperature and humidity	SENS-COOLM
GTPro	Leaving air temperature (LAT)	SEN-RESPRO
GTPro	Loop temperature	SEN-RESPRO
GTPro	Outdoor air temperature (OAT)	SEN-RESPRO
HeatPumPro	Leaving air temperature (LAT)	SEN-RESPRO
HeatPumPro	Outdoor air temperature (OAT)	SEN-RESPRO
MPS	<i>MPS does not have sensors.</i>	



SEN-RESPRO

*temperature sensor used for
HeatPumPro and GTPro*



SEN-UPS12

*temperature sensor for
AirBoss*



SENS-COOLM

*temperature and humidity
sensor for CoolMizer*



Technical Support

800-611-8312

7 days a week, 8am–9pm EST

www.arzelzoning.com

Phone: 216-831-6068 ~ **Fax:** 216-831-6074
4801 Commerce Parkway, Cleveland, OH 44128