



A2L Mitigation Wiring for the Pro Panel

Arzel Technical Support
 1-800-611-8312
 techsupport@arzelzoning.com

NOTE: You must use the Arzel Pro app to configure the setting **EXT Input During A2L Leak**. If the dry contacts close when there is a leak, select 24VAC. If the dry contacts open when there is a leak, select 0VAC.

If the RDS board signals that there is a leak, the Pro Panel will:

- Shut off the heating and cooling
- Turn on the fan in the highest stage available
- Open all dampers
- Flash the STATUS light in the lower left corner of the board
- Show a message on the Arzel Pro app dashboard

