


Interface Panel Installation Diagram

Control Arzel dampers with an OEM zoning system

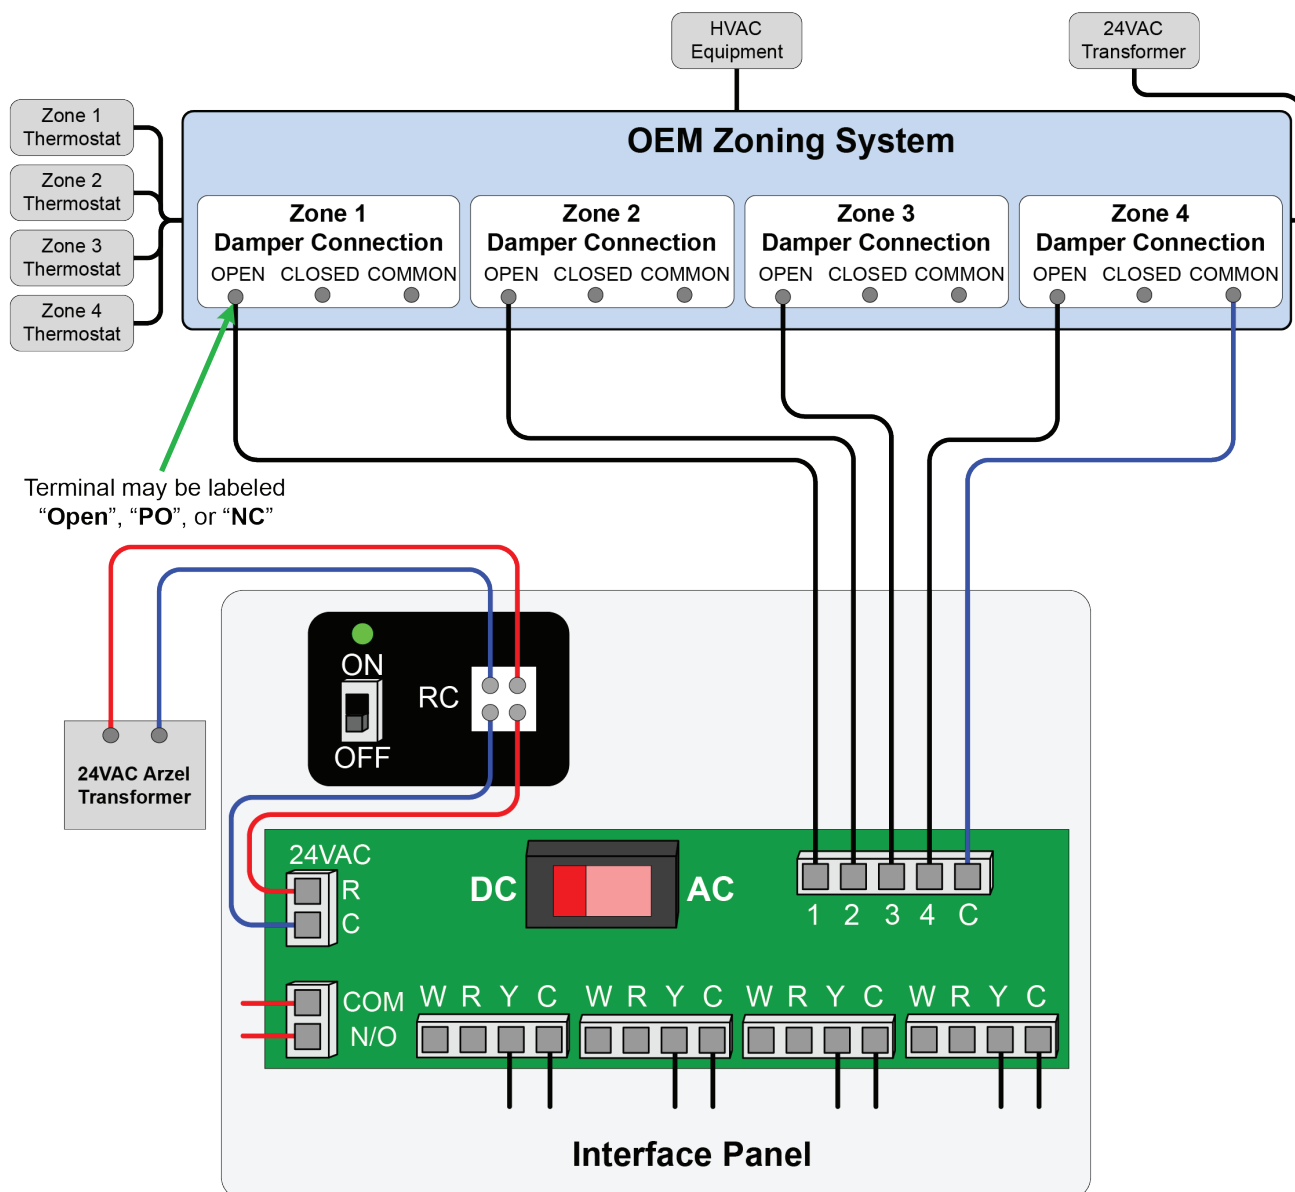

- The OEM zoning system must provide a constant 24VAC signal to open dampers.
- The Interface panel is only compatible with zoning systems that support 2-wire, 24VAC, power-open, spring-closed dampers.
- OEM zoning systems that support both 2-wire and 3-wire motorized dampers must be configured to control 2-wire dampers for proper operation.

Technical Support

800-611-8312

Monday–Friday,
8am–9pm EST

Arzel Zoning
www.arzelzoning.com

Phone: 216-831-6068

Fax: 216-831-6074

4801 Commerce Parkway
Cleveland, OH 44128